


Instrucciones de instalación / Mounting instructions:

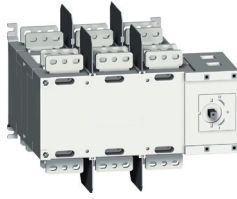

56AC3200
56AC3250
56AC3320




56AC4200
56AC4250
56AC4320


Interrupidores y accesorios / Switch and accesories




26983200 (3p)
26984200 (4p)

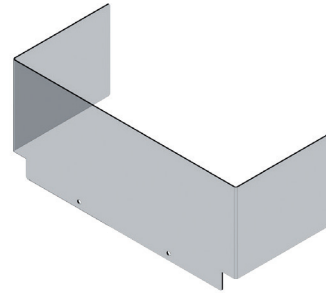


56AC3200 / 56AC4200
56AC3250 / 56AC4250
56AC3320 / 56AC4320

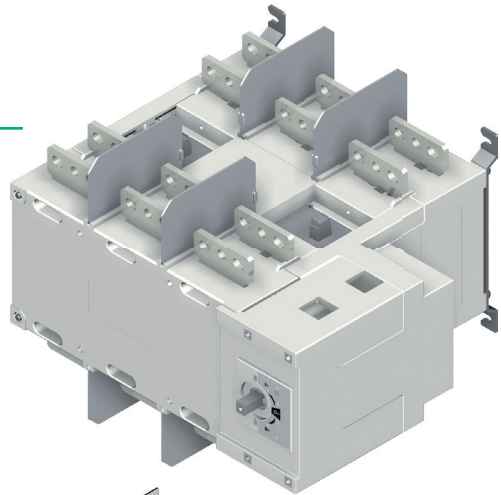


S083020
S083032

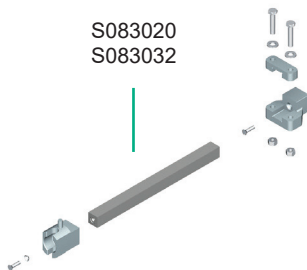


S13S5C

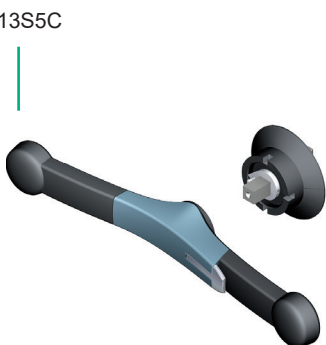





S11C2

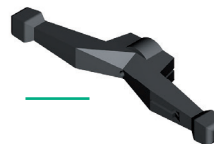

26983200 (3p)
26984200 (4p)

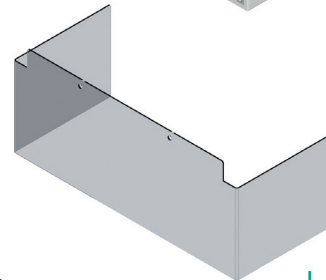


Sentido de montaje / Mounting orientation

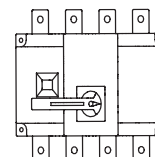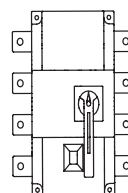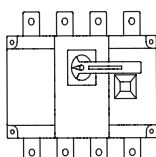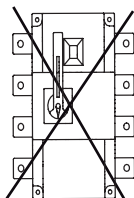


2000A 2500A


VERSION 01

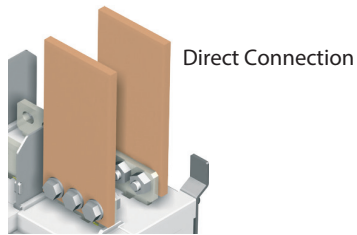

VERSION 02

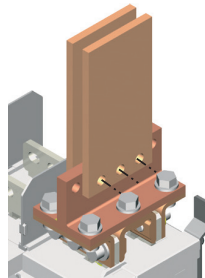


VERSION 03

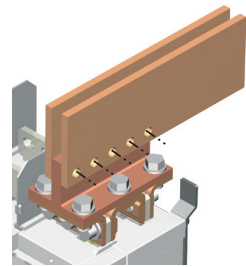


3200A

VERSION 04

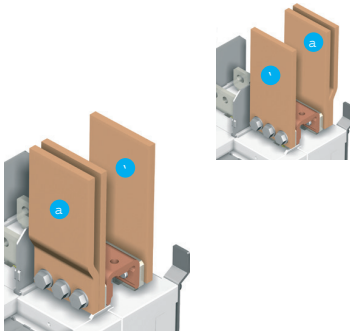


VERSION 05

@ 2900A Max

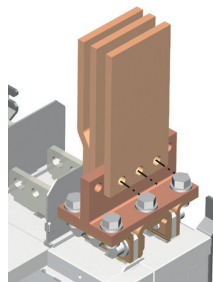


VERSION 06

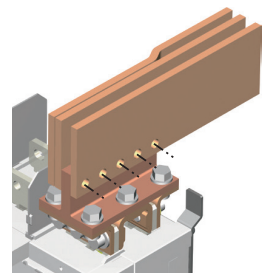


2000A 2500A


VERSION 07

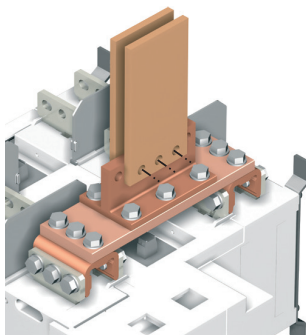

VERSION 08

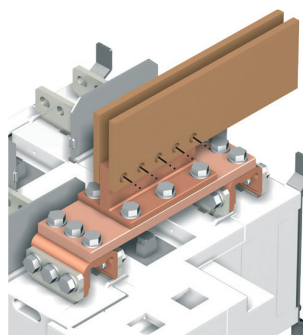


VERSION 09

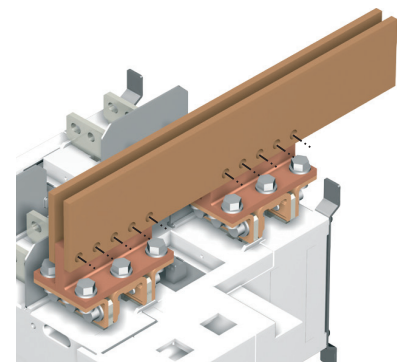


3200A

VERSION 10


@ 2900A Max





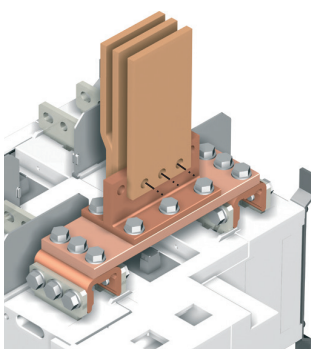


VERSION 11






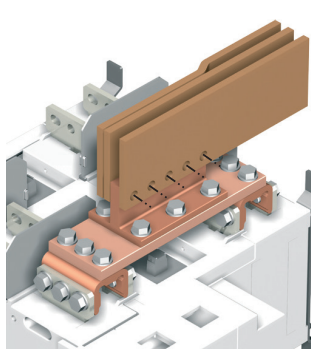


VERSION 12

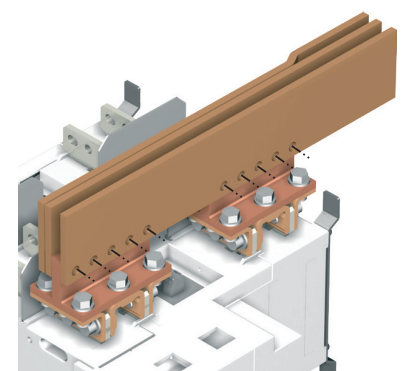


 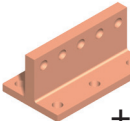    x 1 included with 3200A product as standard	 x 6	 x 1 +  x 6
 x 2 +  x 6	 x 1 +  x 6	 x 1 +  x 6

VERSION	 708 lb-in 80 Nm		
	 MOY.MM 12 NFE 25 511	 H M12	
01	HM 12-35 6.8- 6	x1	2x 6 x
02	HM 12-55 6.8- 3	x6	x 3 x
03	HM 12-55 6.8- 5	x1	0x 5 x
04	A HM 12-35 6.8- 3	x3	x -
	B HM 12-45 6.8- 3	x3	x -
05	HM 12-65 6.8- 3	x6	x 3 x
06	HM 12-65 6.8- 5	x1	0x 5 x
07	HM 12-55 6.8- 3	x6	x3 x
08	HM 12-55 6.8- 5	x1	0x 5x
09	HM 12-55 6.8- 1	0x	20 x1 0x
10	HM 12-65 6.8- 3	x6	x3 x
11	HM 12-65 6.8- 5	x1	0x 5x
12	HM 12-65 6.8- 1	0x	20 x1 0x

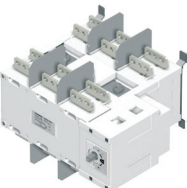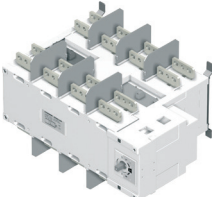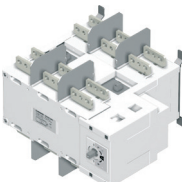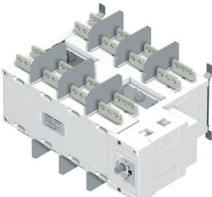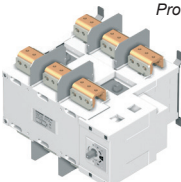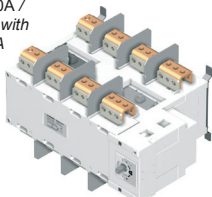A I th = 2000A		B I th = 2500A		C I th = 3200A	
3P 56AC3200	4P 56AC4200	3P 56AC3250	4P 56AC4250	3P 56AC3320	4P 56AC4320
					
				Proporcionado con 3200A / Provided with 3200A	

Longitud del eje /
Shaft lenght

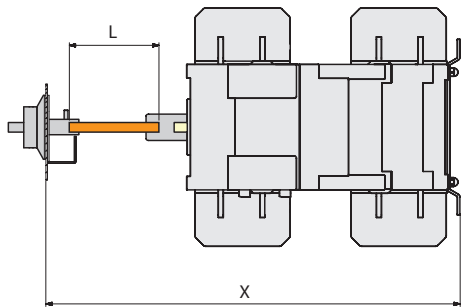

$L = X - 19.86$ -0.08 in



$L = X - 504.5$ -2 mm

Dimensiones (in/mm) / Dimensions (in/mm)



Dimensiones duales mm

Dual dimensions in



VERSION 01

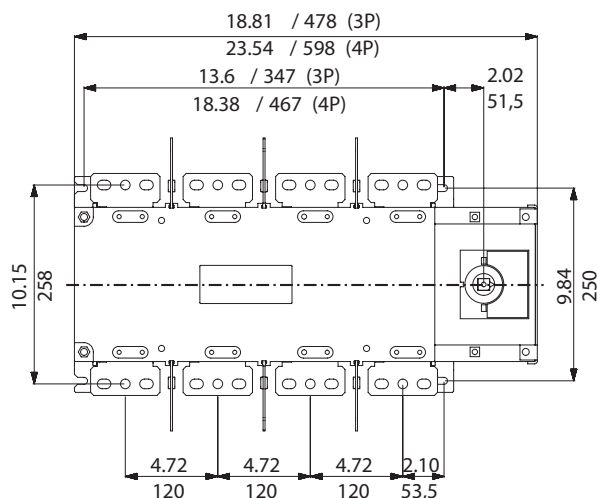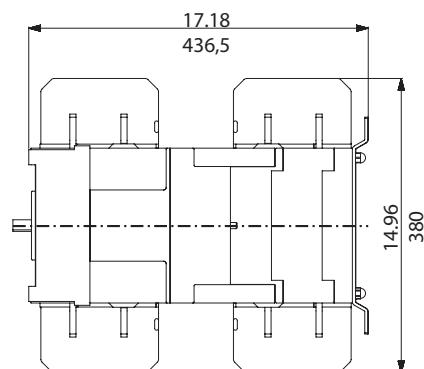




VERSION 04

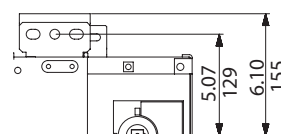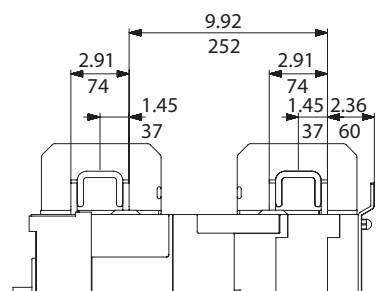

VERSION 02 - 03 - 05 - 06 - 09 - 12

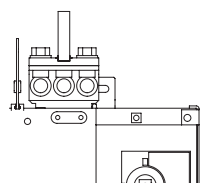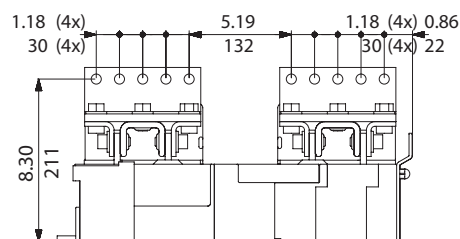

VERSION 07 - 08 - 10 - 11

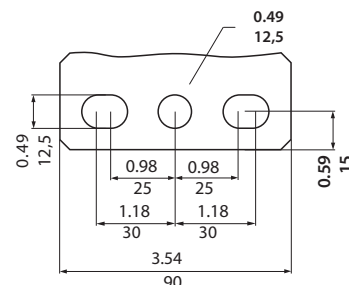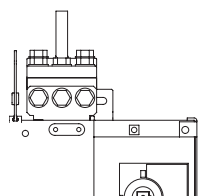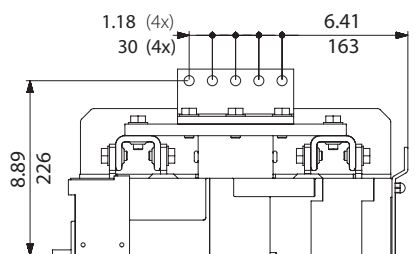

⚠ PELIGRO / DANGER

TENSIÓN PELIGROSA Únicamente el personal de mantenimiento eléctrico especializado deberá instalar y prestar servicios de mantenimiento a este equipo. Cortar la alimentación del equipo antes de realizar cualquier trabajo en él. Utilice siempre un dispositivo detector de tensión adecuado para confirmar la falta de tensión en el equipo. Vuelva a colocar todos los dispositivos, las puertas y las cubiertas antes de poner el equipo en tensión. El incumplimiento de estas precauciones podrá causar la muerte o lesiones graves.

HAZARDOUS VOLTAGE This equipment must be installed and serviced only by qualified electrical personnel. Turn off all power supplying this equipment before working on or inside equipment. Always use a properly rated voltage sensing device to confirm power is off. Replace all devices, doors, and covers before turning on power to this equipment. Failure to follow these instructions will result in death or serious injury.